



Doc name: BD FW 3.8 Release note	Date: 130204
Author: Per Bengtzohn	Revision: V01

Release note for FW 3.8

FW 3.8 differs from previous releases and the new features is described in this document.

1. Mid Timing

Mid Timing is now divided into 2 settings, start and end.

The Start timing is the timing that is applied as soon as the motors rpm is above the set mid rpm value.

End Timing is the maximum timing which will be reached before full throttle is reached (When full throttle is applied Top timing is activated).

Suggested settings:

Stock:

Mid Start RPM: 2000 - 3000

Mid Start timing: 20

Mid End timing: 40 – 45

Top RPM: 8000

Delay: 800

Top Timing: 50-55